

## **SMARTVUE**



**Installation Manual** 

## **PARTS OVERVIEW**

Please use the following illustrations for reference during the installation procedure. App-Tronics recommends the use of our Authorized Dealers for installation of the SmartVision. Please contact us to receive a list of available dealers near you. The extended warranty can only be given when installed by an Authorized Dealer.





Fig. 1D
Universal Windshield
Mount

Fig. 1D, Our universal windshield mount fits most vehicles without any special installation. In rare cases this mount will not work please contact your authorized dealer or App-Tronics for support, we offer a full line of OEM specialty mounts.



Fig. 2A, Is the main wiring harness for the SmartVisionMirror. This harness will connect to the mirror and lead to the power source.

Fig. 2B, Video and power line feed for backup camera. This harness will connect to the main harness and lead to the reversing camera.



Fig. 2B Camera Wiring Harness



Bzckup Camera

Fig. 2C, Reversing camera

App-Tronics offers several optional cameras please contact your authorized dealer or App-Tronics if you want a specialty camera.

Fig. 2D, App-Tronics parking sensors with audible alerts. This is an optional add on.





Fig. 2e, App-Tronics premium parking sensors with audible and visual alerts. These parking sensors are designed for metal bumpers. This is an optional add on.



Fig. 2E Premium Parking Sensors

## **CONNECTION POINTS OVERVIEW**



## INSTALLATION GUIDE



Install mount on back of SmartVision with the provided screws.

Fig. 4A



Fig. 4B

Attach the mount according to what mount you are using. If you are using pre-existing anchor and OEM mount, use same process but in reverse of the factory mirror and mount you removed. If using universal mount and new anchor, you need to attach anchor with windshield mount repair kit which can be purchased at any auto parts store (not provided with purchase of SmartVision).

The mount provided fits nearly all vehicles on the road. Please contact App-Tronics for a complete applicational mounting chart for all other vehicles.



Tuck wire from SmartVision into headliner. It only has to go in just a little to stay in place.



Route to which ever pillar A or B will get you to your power source. In this case it was A pillar, the Driver side.





Remove weather stripping and run wire harness behind it. As you come down the pillar, tuck weather stripping back into place pressing firmly. You may need to use a plastic wedge tool to force back behind dash.





Locate your power source to be used for installation. Each SmartVision needs both constant and accessory power as well as ground. Each main wire harness has these wires marked clearly. Guide the main harness down the A or B pillar to this location. You can gently remove the weather stripping and tuck into place then use your fingers to push harness inside headliner to the mirrors location.

A. Using a volt meter locate you constant power source, tap the Red wire (12 Volt Positive) into this source. Be sure that this constant power source does not "go to sleep" after 15 minutes.

B. Use the same process to find an accessory power source (Power only on while car is running or in accessory keyed position). The Blue wire will need to be tapped into this source. You must also tie in the Red pigtail wire from the rear camera harness to the same accessory power source. Splice the wires together. This will allow the rear camera to stay on while car is running to record.

C. The Black wire is your ground, locate a strong solid grounding source. Attach the Black wire to this location.

5. The Green wire at the end of main harness needs to be tied into the vehicles reverse relay in the front of the vehicle, usually located in the cars BCM module, if the BCM module cannot be located you can extend the wire all the way to the reverse bulb in the back of vehicle. Please see page 12 for wiring diagram. This will trigger the rear camera to display when car is put into reverse.






Fuse Panel Fuse Tap

In some cases you are unable to find a power harness, locate your interior fuse panel. You can purchase fuse taps from any auto parts store. Connect the constant power wire (red cable batt+) to a constant power fuse and the blue wire to a accessory power fuse. Please refer to vehicles owner's manual for a listing of fuses.



Next find your ground source, (black wire) you may have to extend your black ground wire to find suitable location.

Next attach your rear camera feed (yellow RCA connectors). From the wire harness and the rear camera wiring harness. If you have not been able to locate the reversing relay on vehicle you can tie in the Red wire from camera harness to the Green reversing line on main harness. (continued on next page)

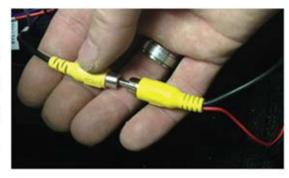

Next run the rear camera wire feed to back of vehicle along the floor board trim then under rear seat. Mount your camera in desired location. To do this properly some panels may need to be removed in trunk or lift gate.






Rear camera installation: (App-Tronics recommends installation by a professional service. Go to app-tronics.com and search dealer locator.) Call 1-888-587-4111 for assistance.

 Guide the rear camera harness from the end of the main harness to the back of the vehicle removing trim pieces as needed. Note: Route the correct end to the back of the vehicle. You only need to tie the Red power line for rear camera to the other Red pigtail on the rear camera harness. The camera will be powered from the blue accessory line on main

harness.

- You may need to also attach the black ground wire for the rear camera yet may not be needed. Call 1-888-587-4111 for assistance
- 4. Find a suitable location to attach the rear camera to the vehicle. Depending on vehicle, cameras may vary. Use the provided double sided tape and screws provided for installation. (Some trim pieces will need to be removed and then reinstalled for proper installation).

If you cannot connect the green camera wire to the vehicles BCM module please us the wiring diagram below for proper installation. A length of wire (24 gauge) approximately 25 feet will need to be purchased, it is not included with this kit.

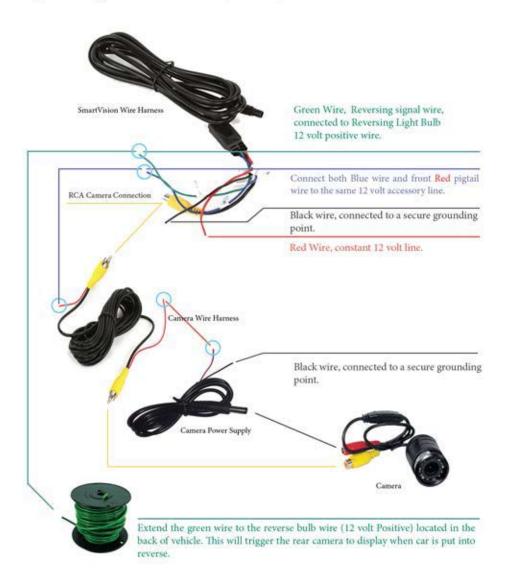



If you have any questions email App-Tronics at info@app-tronics.com or call 1-888-587-4111 for further assistance.

If you have purchased the optional Parking Sensors along with your SmartVue. You would have received the installation manual with the sensors. Below is a quick layout of the additional wiring needed to help you start the Parking Sensors installation process.

(Refer to manual included with the parking sensors packaging).

App-Tronics motto "Details on their own can mean little, together they mean everything" is how this company was started. Perfecting everyaspect of the products' use and performance has always been our goal. When you see the SmartNav 5 for the first time, you will appreciate the dedication the staff at App-Tronics has put into this product. This is what makes the SmartNav 5 the benchmark in applicational rear view mirrors that will never be challenged.